



USER MANUAL – EN
IN 26549 Hot tub inSPORTline Evinos



CONTENTS

- SAFETY INSTRUCTIONS..... 3
- SPECIFICATIONS..... 6
- PACKAGE CONTENTS 6
- HOT TUB PLACEMENT 7
- ASSEMBLY 8
- CONTROLS..... 10
- HOT TUB COVER 11
- MAINTENANCE 11
 - WATER MAINTENANCE..... 11
 - CLEANING AND FILTER REPLACEMENT 12
 - WATER TREATMENT 12
- DRAINING AND STORAGE..... 12
- REPAIR KIT..... 13
- TROUBLESHOOTING 13
- ERROR CODES..... 14
- ENVIRONMENT PROTECTION 15
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 15

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS

- Please read the manual before use and keep it for future reference.
- All notices, warnings and instructions related to safe movement around water cannot cover all situations and hazards that may occur. Always use common sense and always supervise children and wards.
- We recommend building barriers around the device to prevent unauthorized use.
- Any safety features (barriers, covers, alarm, etc.) cannot replace the adult supervision.
- We recommend placing rescue equipment around the device.
- Always have a phone with emergency numbers nearby.
- We recommend that all users be familiar with the basics of swimming.
- The person who was entrusted with the supervision should be able to provide first aid and perform resuscitation.
- All users should be informed how to behave in an emergency situation.
- Do not submerge below the surface of the water.
- Do not use under the influence of alcohol, medication, or drugs.
- If the device is covered by a cover, you must remove it before use.
- Regularly treat the water with appropriate means.
- Ladders and steps must be placed so that they cannot cause injury.
- The drained hot tub must be secured.
- Assembly and maintenance may only be performed by an adult.
- Follow all maintenance instructions.
- For home use only.
- For outdoor use only.
- Risk of drowning.
- If you do not plan to use the device for a long time, drain the water from it. Do not store outdoors.
- Failure to follow instructions and warnings may result in drowning, serious injury or electric shock.
- Children must be under the constant supervision of an adult or guardian.
- The number of persons responsible for supervision must be proportional to the number of users.
- Do not jump into or submerge in the hot tub.
- Do not run around the hot tub.
- Maintenance products must be stored out of the reach of children.




WARNING: Children must be supervised at all times.



WARNING: No diving.

- Prevent unauthorized use by children.
- Check regularly for damage, water leaks or wear. Never use damaged or worn safety features.
- Never use the hot tub if it is damaged, all parts must be replaced with original parts or suitable replacements.
- If the power cord is damaged, it must be replaced by a professional.
- There must not be any electrical devices within a distance of 1.5 m around the device.
- Do not use during rain or storm.
- To reduce the risk of electric shock, do not use extension cords or adapters. Always plug the hot tub into a safe outlet.
- The hot tub should be connected via a residual current device (RCD) whose rated residual operating current does not exceed 10 mA.
- All electronic devices must be located or secured so that they cannot fall into the hot tub.
- Any outlets should be at least 2m away from the hot tub.
- All electrical installations must meet safety standards.
- Not suitable for children under 8 years old.
- Persons with reduced mental or motor abilities, lack of knowledge and experience must be under the constant supervision of an adult.
- Children are not allowed to play in the hot tub.
- Children should not be around the hot tub during cleaning and maintenance.
- Make sure the bearing surface area is at least $\geq 500 \text{ kg/m}^2$.
- A drainage system must be created around the device.
- To avoid damage, do not leave the hot tub without water for an extended period of time.
- To avoid damage to the pump, it must not be run without water.
- If you feel nauseous or tired, leave the hot tub immediately.
- We recommend using lower temperatures for children or if continuous use exceeds 10 min (water temperature below 40 °C).
- A water temperature of up to 30 °C is suitable for pregnant women, or for women who might be pregnant.
- Before entering the hot tub, check the temperature of the water with a suitable thermometer.
- People suffering from obesity, heart disease, people with high or low blood pressure, circulatory disease or diabetes should consult their doctor for use.
- People taking medication should consult their doctor before using a hot tub.
- Persons suffering from an infectious disease should not use the hot tub.
- Water with a temperature higher than 40 °C can cause injury.
- We do not recommend using the hot tub alone or allowing another person to use it alone without supervision.
- Do not use after strenuous training or physical activity.
- Do not leave the hot tub in temperatures below 4°C.
- Do not turn on the hot tub if the water in it is frozen.

- Never pour water at a temperature of 40 °C and above directly into the hot tub.
- Before any maintenance, the hot tub must be disconnected from the electricity supply.
- Protect the power cord from damage.
- Never touch electrical parts with damp or wet hands.
- Do not use if the hot tub is damaged or not working properly.
- Keep away from animals.
- Do not add bath salts or oils.
- The device must not be connected to any timer or through an external device providing current.
- Don't dive in.
- Do not drink the hot tub water.
- A sudden change in temperature can cause dizziness or loss of consciousness.
- Complies with IEC 60364-7-702.
- Hot tub wiring must be located in zones 1, 2 or outside of all zones. The measured zones are limited by walls or solid partitions.

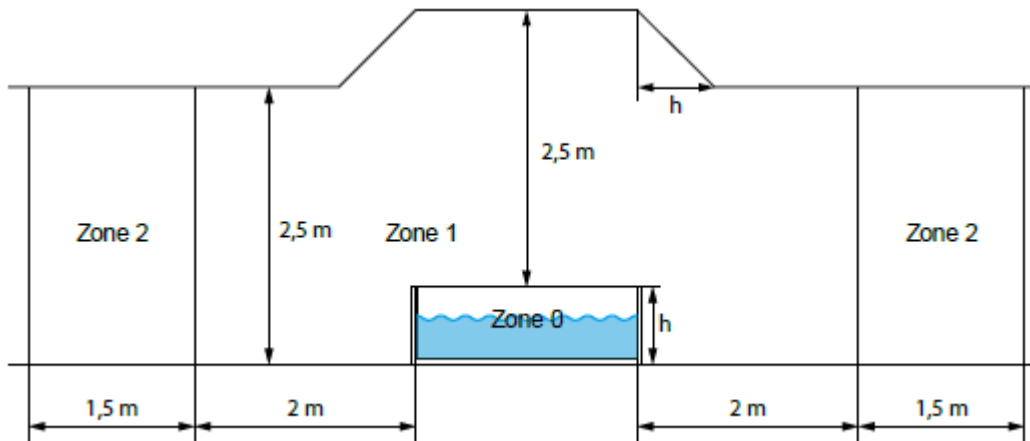

Zones	Description
Zone 0	The interior of the hot tub, including its walls and base.
Zone 1	Zone 1 is limited by: Zone 0 2 m vertically from the edge of the base 2.5 m horizontally from the floor or water surface
Zone 2	Zone 2 is limited by: 1.5 m and further vertically from the border of zone 1

SPECIFICATIONS

Model	14015XX
Number of persons	3 persons
External dimension	148 x 148 x 65 cm
Internal dimension	115 x 115 x 65 cm
Water capacity	580 l
Power supply	220-240 V, 50 Hz, 1545 W
Max. water temperature	42 °C
Certificates	CE/UKCA
Heating efficiency (<i>for an ambient temperature of 20 °C</i>)	1,5 – 2,5 °C/h

PACKAGE CONTENTS

 <p>Hot tube</p>	 <p>Pump</p>	 <p>Cover</p>
 <p>Power cable</p>	 <p>Valve</p>	 <p>Inflator hose</p>
 <p>Wrench</p>	 <p>Repair kit</p>	 <p>Filtr</p>
 <p>Filter holder</p>	 <p>Pin for reset</p>	

HOT TUB PLACEMENT

WARNING: The hot tub must be placed on a flat and clean surface without sharp edges. Avoid placing the hot tub on top of vegetation that could grow through the hot tub.

Make sure the selected location meets the following:

- Flat and even surface.
- The surface must be large enough for the hot tub and pump.
- The surface must be able to bear more than 500 kg/m².
- The hot tub must be covered against direct sunlight and the influence of the weather.
- The entire surface must be free of sharp edges and objects.
- The hot tub must not be placed on vegetation that could damage the hot tub.



Protect from direct sunlight



Clean surface



Even surface

- The power supply must be tested before use.



Plug into the power supply



Press reset until the indicator turns red




Press the test until the indicator turns off.



Press reset until the indicator turns red.

Grounding: Consult an electrician for proper grounding before connecting.

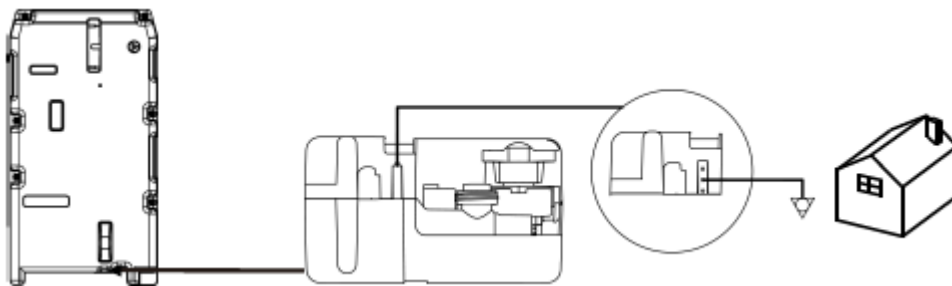

ASSEMBLY


At least 1 adult is required for assembly.




Place the hot tub on a suitable surface, if a mat is included, use it.




Tighten the inflation valve with a wrench.

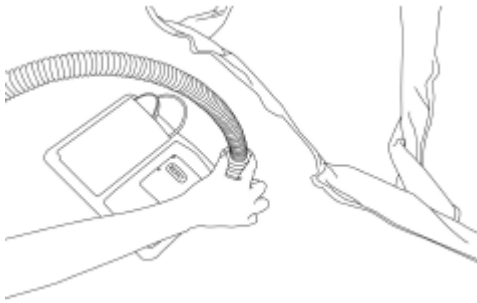

Connect the hose to the pump and tighten.

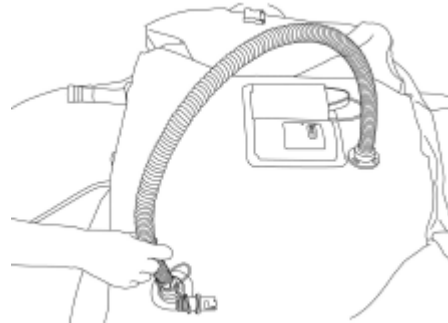


Connect the hose to the hot tub.

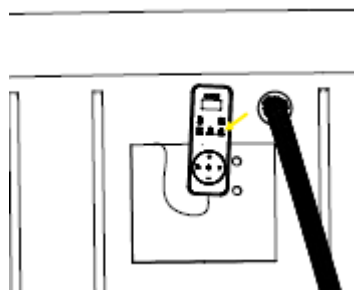


Press the button to create bubbles.




The hot tub will be inflated in approx. 10 minutes. Make sure it is sufficiently inflated.

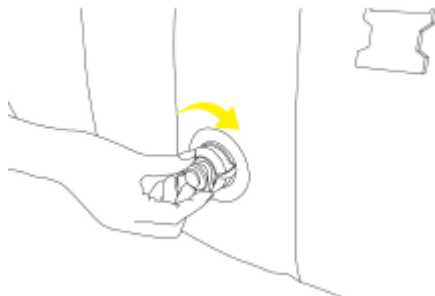

Disconnect the hose and tighten the valve.

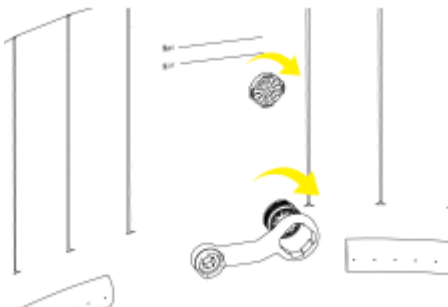


Tighten the fill and drain valves.

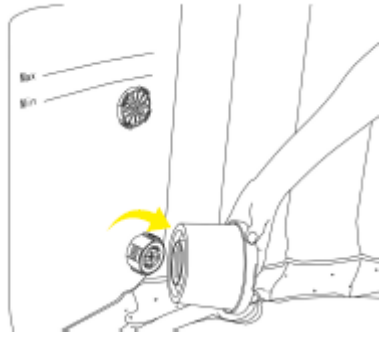

Place the filter on the lower valve.




Make sure the water drain valves are tight before filling.

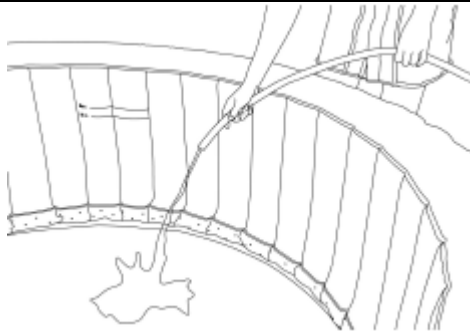

Fill the water.


Warning:

- Do not leave unattended during filling.
- Make sure the water drain valves are properly tightened.
- Once you've filled about 2.5cm of water, smooth the bottom of the hot tub.

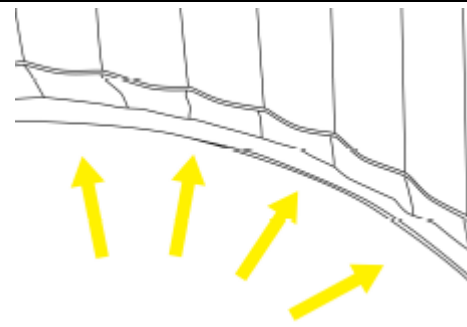

Smooth the bottom of the hot tub.

CONTROLS

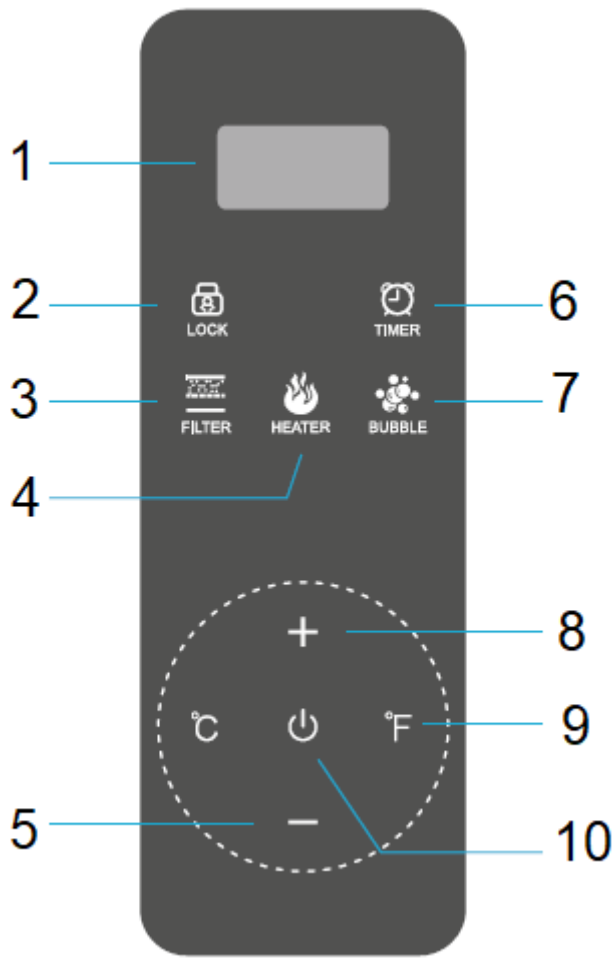

1. LED display
2. Lock
3. Filtration
4. Heating
5. Lowering temperature
6. Timer
7. Massage / bubbles
8. Increasing temperature
9. Selection of temperature units
10. Power switch

After starting, the current water temperature will be displayed.



You can display the temperature in Celsius (°C) or Fahrenheit (°F).

Press both °C and °F buttons simultaneously for 10 seconds to change the adjustable temperature range:

- FO (20 °C – 40 °C)
- F2 (20 °C – 42 °C)



Press the button to change the temperature. As soon as the temperature flashes on the display, it is possible to adjust it. The value is adjusted in 1 °C increments. The temperature can be set between 30°C and 42°C.

Hold to quickly adjust the temperature.



Hold for 3 seconds to lock the control panel.



Press to start bubble massage. An indicator will appear on the display. To turn off, press the button again.

 
Note: The bubble massage will automatically turn off after 30 minutes.



You can set the heating timer with the button.



Press to start water filtration. If filtering is started, an indicator will appear on the display.



Press the button to start heating and filtering the water. If the function is active, an indicator will appear on the display. The heating will be active until the set water temperature is reached. The heating will start again if the water temperature falls below 2 °C from the set temperature. The maximum temperature is 42 °C.

WARNING: After 150 hours of filtering, an audible signal will sound and the display will show CHG and FIL. Replace or clean the filter. Hold the filter button for 5 seconds to turn off the notification.



Press the button to turn the hot tub on/off.

HOT TUB COVER

After use, the control panel should be turned off and the hot tub covered with the cover.

The cover is fixed using straps with a buckle.



MAINTENANCE

WATER MAINTENANCE

WARNING: Poor water quality can lead to health complications.

WARNING: Use any water treatment products as directed, excessive or incorrect use may result in damage to the hot tub.

Depending on the frequency of use, we recommend the following maintenance:

- Clean the filter (after 150 hours of operation).
- Change the filter once or twice a month.
- The water should be changed every 15 to 30 days.

Test the water weekly with a test kit.

Use water treatments according to the instructions on the product.

Test the PH of the water regularly, it should be between 7 and 7.4.

For water sanitation, we recommend using disinfectants based on active oxygen or bromine.

CLEANING AND FILTER REPLACEMENT

Unscrew the filter holder and remove the filter.

Clean the filter under running water. If the filter cannot be cleaned, it must be replaced.

Place the filter back into the holder and screw it back in place.



WATER TREATMENT

For sanitation, use agents based on active oxygen or bromine placed in a floating dispenser (sold separately).

If the water is heavily polluted, do not use the hot tub.

Clean the hot tub using UV lights.

If you are not sure, contact a professional service.

DRAINING AND STORAGE

Check the stopper on the bottom of the pool and the drain valve.

Unscrew the drain valve.

Remove the stopper from the hot tub and drain the water.

Clean the hot tub with soap and water.



Press the bubble massage button to push the rest of the water out of the hot tub. Turn off the pump and remove the filter from the hot tub.

Dry the hot tub properly with a towel and let it dry for at least 24 hours.

Open the air valves.

Fold the hot tub.

We recommend storing the hot tub in its original packaging in a dry and warm place.



REPAIR KIT

- Minor damage can be repaired with a repair kit.
- Find the place where the water is leaking.
- Clean the area properly.
- Cut out a large enough patch in a round shape.
- Apply the adhesive to the patch and around the damaged area.
- Place the patch in the desired location and press firmly. Allow the glue to dry for 12 hours. Then apply a layer of glue around the edges and let it dry (approx. 4 hours).

TROUBLESHOOTING

Error	Cause	Solution
The control panel display does not show information	Check the power source	Power failure
		Unplug and plug in from the mains
		Contact the service department
Not heating properly	The temperature is set to a low value	Set a higher temperature
	The filter is dirty	Clean or replace the filter
	Low water level	Fill the water to the minimum value
	Damage to the heating element	Contact the service department
Bubble massage doesn't work	The pump is overheating	Turn off the pump until it cools down
	The massage switches off automatically after 30 minutes of operation	Press the massage button again
	The pump is damaged	Contact the service department
Water filtration is not working	The filter is dirty	Clean or replace the filter
	The inlets and outlets are dirty	Clean from dirt
	The filter sucks in air	Low water level
	Damage to the pump	Contact the service department

Water is leaking from the pump	The seal is in the wrong position	Adjust the seal position
	Water escapes through the main part of the pump	Contact the service department
Water leaks from the hot tub	The hot tub is torn or punctured	Repair with repair kit
The water is not clean	Short water filtration time	Increase the frequency of filtration
	The filter is dirty	Clean or replace the filter
	Poor water quality	Change the water
	Poor water disinfection	Follow the instructions for sanitation
CHG FIL	After 150 hours of filtering, a beep will sound and the LCD display will show CHG FIL. Hold the filter button for 5 seconds to turn off notifications.	

ERROR CODES

Code	Situation	Problem	Cause	Solution
E1	Bad heating	Damaged temperature sensor	The sensor is damaged	Contact service
E3	Bad heating	High water temperature (over 47°C)	The water temperature is above 47 °C Incorrect filter position	1. Unplug and fill with water from 2°C to 44°C 2. Unplug and clean the valves 3. Place the filter in the correct valve
E4	No function can be started, sound warning	Low water temperature (below 2°C)	The water temperature is below 2 °C	Unplug and fill with water from 2°C to 44°C
E6	Bad heating, sound warning	Water pressure is low to activate the heater	The inlets and outlets are dirty The filter is dirty The water is below the minimum filling level Damaged pump, does not release air	Clean the inlets and outlets Clean or replace the filter Top up the water


Solution for code E3

1. Power off, power off and pin reset. Insert the pin into the hole labeled reset.
2. Check the correct water level.
3. Clean or replace the filter.
4. Clean the hot tub inlets and outlets.
5. Check that the pump impeller is clean.
6. Wait at least 30 minutes before plugging in and starting.

Solution for code E6

1. Turn off.
2. Follow steps 2-4 from the previous solution.
3. Wait 5 minutes before connecting.

If the error persists, contact the service department.

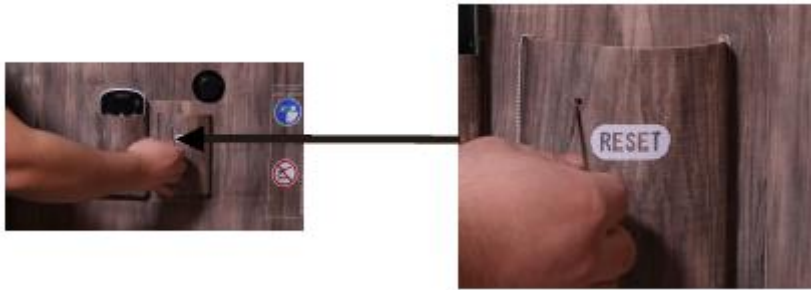

Picture where to insert reset pin

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ
SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00,
ČR

Headquarters: Dělnická 957, Vítkov, 749 01

Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264

VAT ID: CZ26847264

Phone: +420 556 300 970

E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK
inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471,
Trenčín 911 01, SK

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701

E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

