


USER MANUAL – EN

IN 26334 Exercise machine inSPORTline X-NT LE10 Leg Extension/Curl

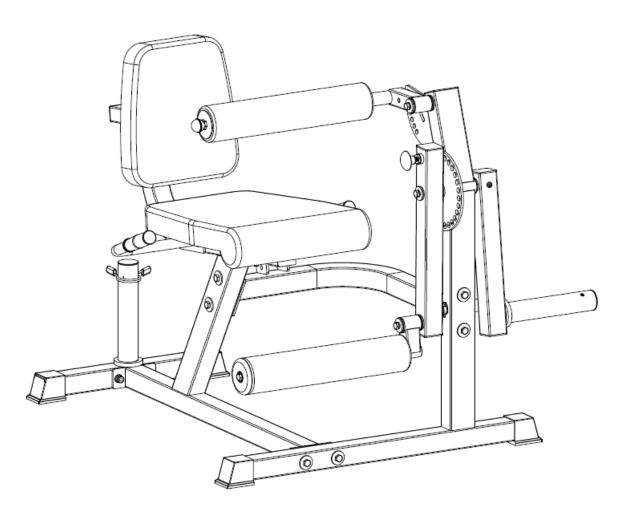

CONTENTS


| SAFETY INSTRUCTIONS | 3 |
|---|----|
| ASSEMBLY | 4 |
| PARTS LIST | |
| MAINTENANCE | |
| EXERCISE INSTRUCTIONS | 9 |
| ENVIRONMENT PROTECTION | 11 |
| TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS | 11 |
| | |

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.

SAFETY INSTRUCTIONS


- Before use and assembly, read the manual and keep the manual for future reference.
- Before starting assembly, check that the package is complete and the condition of all parts. Use only original spare parts and accessories. Do not make unauthorized modifications to the product.
- Assembly may only be carried out by an adult, assembly by 2 persons is recommended. Before use, check the correct assembly and strength of the product. The device must function properly to avoid injury to the user. If the device does not work properly, shows signs of wear or damage, stop using it. Damaged or worn parts must be professionally replaced.
- Keep out of reach of children and pets.
- Only for one person at a time.
- If you experience nausea, chest pain or any other abnormal physical symptoms, stop exercising immediately.
- Keep limbs away from moving parts.
- Place the machine on a flat, firm, and clean surface.
- Always wear suitable sports clothing and shoes, do not wear loose clothing or jewelry.
- Use only for the purposes for which the machine was assembled.
- Do not make unauthorized modifications.
- Remove all sharp objects around the device during use.
- For safety keep at least 0.6 m free space around the device.
- People with limited mental or physical abilities must not use the machine.
- Always warm up your muscles before training.
- If sharp edges appear on the machine, stop using the machine immediately.
- Do not put sharp items on the device. Adjustable parts should not interfere with user's movement.
- Inspect the machine before each use; make sure all connections are tightly secured.
- Do not exceed the specified limits.
- Maximum user weight limit: 135 kg
- Category: S for commercial use
- **WARNING:** Before beginning any exercise program, consult your physician. This is especially important for persons with pre-existing health problems. The seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

ASSEMBLY

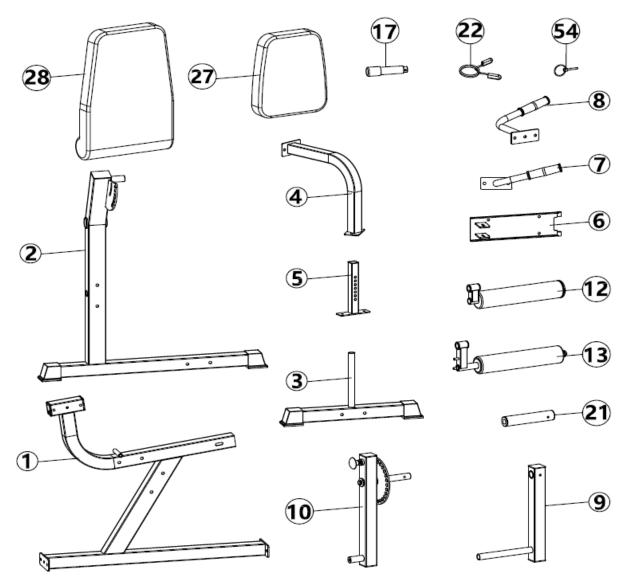

| No. | Name | Qty. | No. | Name | Qty. |
|-----|------------------|------|-----|----------------|------|
| 1 | Main frame | 1 | 12 | Footrest | 1 |
| 2 | Frame with post | 1 | 13 | Footrest frame | 1 |
| 3 | Rear stabilizer | 1 | 17 | Weight holder | 1 |
| 4 | Connecting frame | 1 | 22 | Retaining ring | 1 |
| 5 | Backrest frame | 1 | 27 | Back rest | 1 |
| 6 | Seat frame | 1 | 28 | Seat support | 1 |
| 7 | Left handle | 1 | 54 | Pin | 1 |
| 8 | Right handle | 1 | 21 | Weight holder | 2 |

Connect the main frame (1), posts (2), rear stabilizer (3) and connecting frame (4) with washer (42, 44), M10 nut (47) and bolts M10*70 (49).

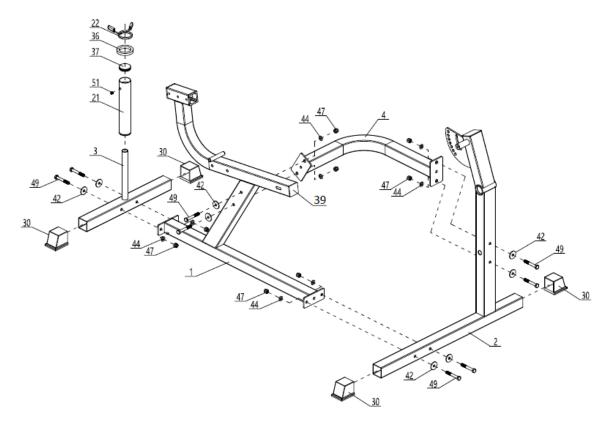


Step 2

Attach the left handle (7) and right handle (8) to the main frame (1) using the flat washer (44). nut M10 (47) and bolt M0*75 (50).

Attach the weight holder (17) to the frame (2) with the pin (54).

Fix the footrest frame (10) to the frame (2) with washer (40) washer (46) and bolt M10*25 (48).

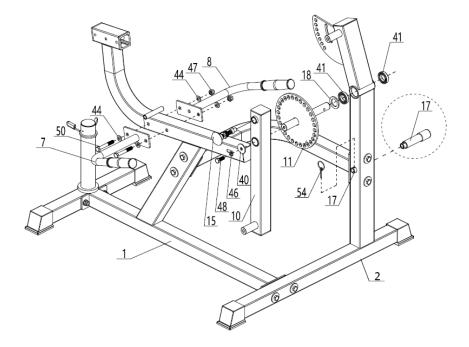


Fix the backrest frame (5) to the main frame (1) with bolts $M10^{*}25$ (48), washer (44) and M10 hand knob (47)


Fix the seat frame (6) to the main frame (1) with bolts M10*140 (16), washers (44) and M10 nuts (47).

Attach the weight holder frame (9) to the main frame (1) with the pin (52), washer (45) and M6 nut (53).


Attach the weight holder (21) to the frame (9) with the M8 screw (51).

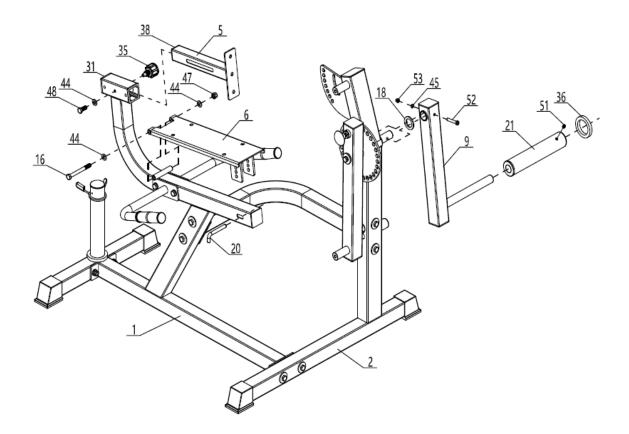

Attach the footrest (12) to the frame (10) with washers (26, 40, 46) and bolt M10*25 (48). Attach the second support (13) to the frame (2) using the washers (40, 46) and bolt M10*25 (48).

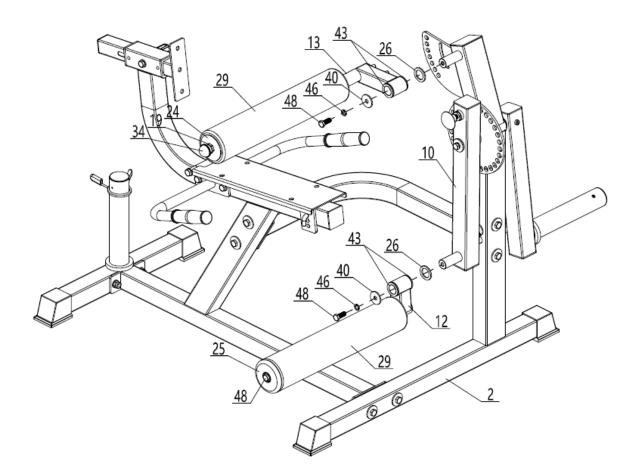

Attach the backrest (27) to the frame (5) using the washer (44) and the bolt M10*25 (48). Attach the seat (28) to the frame (6) using the washer (44) and bolt M10*25 (48). Attach the sleeve (22) to the weight frame (9).

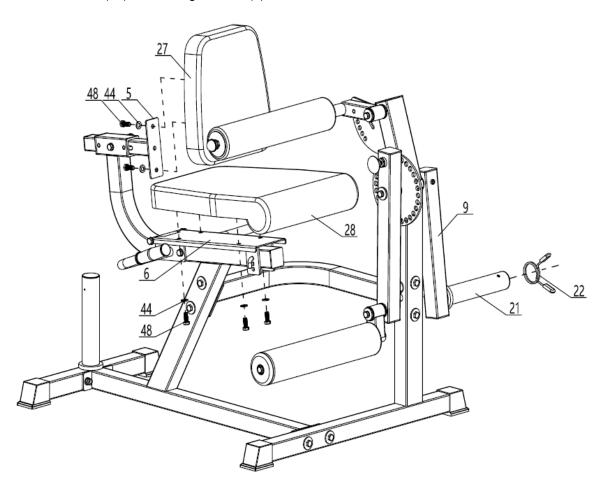

PARTS LIST

| No. | Name | Qty. | No. | Name | Qty. |
|-----|----------------------|------|-----|-----------------|------|
| 1 | Main frame | 1 | 28 | Seat | 1 |
| 2 | Front post | 1 | 29 | Foam roller | 2 |
| 3 | Rear stabilizer | 1 | 30 | End cap F50 | 4 |
| 4 | Connecting frame | 1 | 31 | Sleeve F50*40 | 2 |
| 5 | Backrest frame | 1 | 32 | Handle Ø25 | 2 |
| 6 | Seat back frame | 1 | 33 | 3 Sleeve | |
| 7 | Left handle | 1 | 34 | Hand knob | 1 |
| 8 | Right handle | 1 | 35 | 5 Hand knob M16 | |
| 9 | Weight holder | 1 | 36 | 6 Weight plate | |
| 10 | Adjustable leg frame | 1 | 37 | End cap Ø49.5 | 2 |
| 11 | Movable axis | 1 | 38 | End cap F38 | 1 |
| 12 | Foam roller frame | 1 | 39 | End cap F50 | 5 |

| 13 | Leg press foam roller frame | 1 | 40 | Flat pad Ø40*Ø11 | 3 |
|----|-----------------------------|---|----|------------------|----|
| 14 | Pin | 1 | 41 | Bearings | 2 |
| 15 | Pull pin | 1 | 42 | Flat pad Ø40*Ø11 | 8 |
| 16 | Bolt M10*140 | 1 | 43 | Case Ø38*Ø26 | 4 |
| 17 | Weight screw holder | 1 | 44 | Flat pad Ø11*Ø20 | 21 |
| 18 | Sleeve | 2 | 45 | Washer Ø6 | 1 |
| 19 | Sleeve | 1 | 46 | Flexible pad Ø10 | 3 |
| 20 | L pin | 1 | 47 | Nut M10 | 11 |
| 21 | Plate holder Ø49.5 | 2 | 48 | Bolt M10*25 | 11 |
| 22 | Spring | 1 | 49 | Bolt M10*70 | 8 |
| 23 | Spring | 1 | 50 | Bolt M10*75 | 2 |
| 24 | Foam cylinder cover | 1 | 51 | Bolt M8 | 2 |
| 25 | Foam roller tip | 1 | 52 | Pin with spring | 1 |
| 26 | Pad Ø38*Ø26 | 2 | 53 | Nut M6 | 1 |
| 27 | Back rest | 1 | 54 | Pin with ring | 1 |

MAINTENANCE


- Regularly lubricate all moving parts.
- Check and tighten all connections.
- Clean the device with damp cloth and non-aggressive cleaning detergent.
- Regularly check the device for sign of wear or damage.
- Immediately replace worn or damaged parts, do not use the device until you replace them.

EXERCISE INSTRUCTIONS

Exercise is beneficial to your health, improves physical condition, shapes muscles and, in combination with a calorie-balanced diet, leads to weight loss.


1. WARM UP


This phase serves to improve the blood circulation of the whole body and to warm up the muscles, to reduce the risk of convulsions and muscle injury. We recommend performing the stretching exercises below. When dragging, stay in the end position for approximately 30 seconds, do not make sudden movements and do not vibrate.

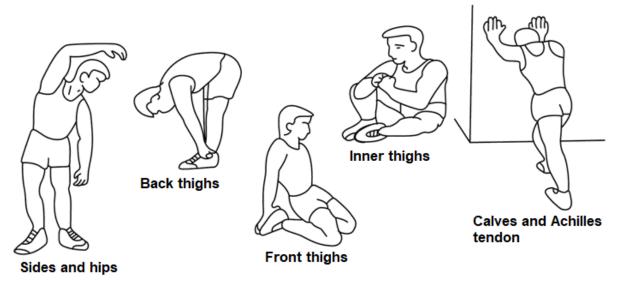

2. EXERCISING

This phase is the most physically demanding part. Regular exercise strengthens the muscles. You can determine the tempo yourself, but it is very important that it is the same throughout the exercise. Heart rate should be within the target zone (see figure below).

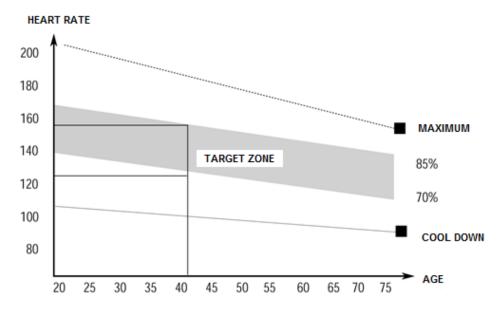



3. COOLDOWN

This phase serves to soothe the cardiovascular system and relax the muscles. It should take approximately 5 minutes. You can repeat warming up exercises or continue exercising at slower pace. Stretching your muscles after exercise is extremely important - you need to avoid sudden movements and vibrations.

With improved fitness, you can lengthen and increase exercise intensity. Train regularly, at least three times a week.

SHAPING MUSCLES

For muscle shaping, it is important to set a high load. The muscles will be more stressed, which may cause that you will not be able to exercise as long as usual. If you are trying to improve your condition at the same time, you need to adjust your training. Exercise in the usual way during the warm-up and final stages of training but increase the resistance of the device at the end of the exercise. You may need to slow down the speed to keep the heart rate in the target area.

WEIGHT LOSS

The number of calories burned depends on the length and intensity of the exercise. The essence is the same as in fitness exercise, but the goal is different.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person

• Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

| CZ SEVEN SPORT s.r.o | Э. | SK inSPORTline s.r.o. | | |
|---|--|--|---------------------------|--|
| Registered Office: Headquaters: Warrapty & Service: | Strakonická 1151/2c, Praha 5, 150 00, ČR Dělnická 957, Vítkov, 749 01 Čermenská 486, Vítkov 749 01 | Headquaters, warranty & service center: Električná 6471, Trenčín 911 01, SK | | |
| warranty & Service. | Cermenska 400, vilkov 749 01 | CRN: | 36311723 | |
| CRN: | 26847264 | VAT ID: | SK2020177082 | |
| VAT ID: | CZ26847264 | Phone: | +421(0)326 526 701 | |
| Phone: | +420 556 300 970 | E-mail: | objednavky@insportline.sk | |
| E-mail: | eshop@insportline.cz | | reklamacie@insportline.sk | |
| | reklamace@insportline.cz | | servis@insportline.sk | |
| | servis@insportline.cz | Web: | www.inSPORTline.sk | |
| Web: | www.inSPORTline.cz | | | |

About shipping

